


# HOW TO ORDER 26R-2 THRU 26R-124

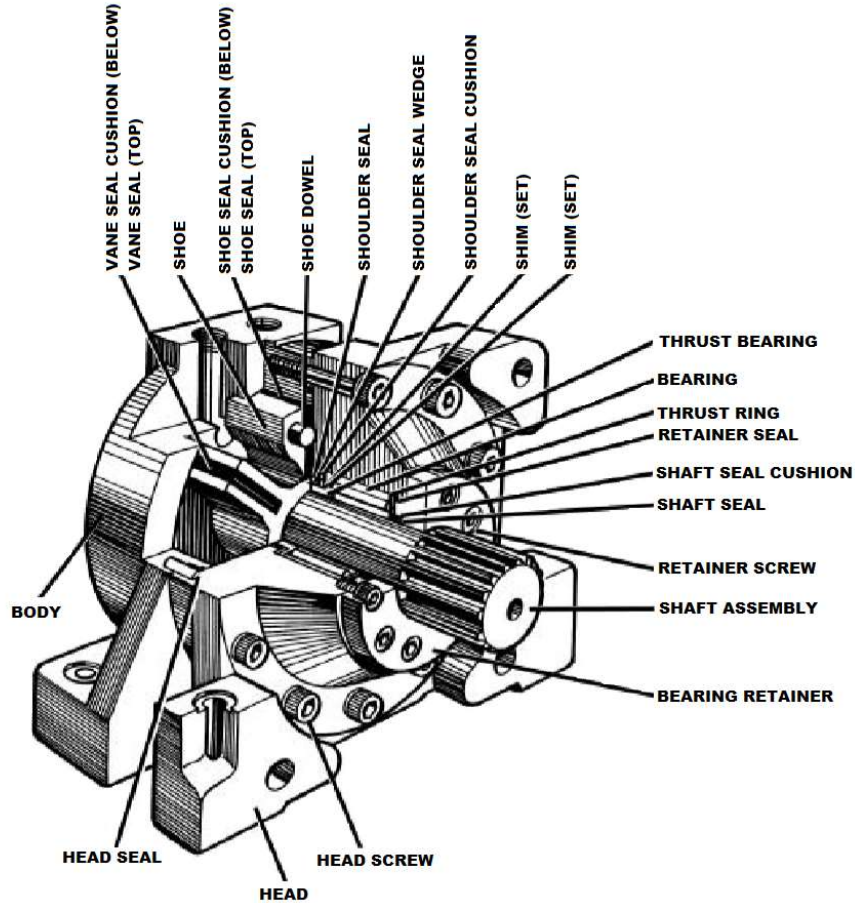

## HOW TO ORDER

Please fill in ALL blocks in accordance with the KEY numbers and letters shown below.

EXAMPLE: 26R - 62 - 1V - SE - IS - FT/FLG - 2

-  -  -  -  -  -

BLOCK #    1        2        3        4        6        7        8

### Block 1 (MODEL)

26R

### Block 2 (SIZE)

2  
5  
10  
17  
31  
62  
124

### Block 3 (VANES)

1V Single Vane  
2V Double Vane

### Block 4 (SHAFT EXTENSION)

SE Single Extension  
DE Double Extension

### Block 6 (SHAFT TYPE)

IS 30° Involute Spline  
PL Plain  
Z Special

### Block 7 (MOUNTING)

FT/FLG Foot/Flange  
Z Special

### Block 8 (PORTING)

1 NPT  
2 SAE Straight Threads (Standard)  
7 Manifold Ports (Consult factory for information)  
0 BSPP Straight Threads  
Z Special

NOTES: 1. Block "5" isn't used for 26R models

2. All "Z" (non-standard feature request) requires a "Request a Quote" to be filled out for Micromatic to review requirements